



Wireless Transmitter Bluetooth (WT-BT)

Opening & Replacing Battery Instructions
Version 4


The following tools will be needed: a small Flat Head screwdriver or pen.

Opening the Transmitter

Step 1. Remove battery cover by depressing the bottom tab upward



Step 2. Depress center of battery holder. This is marked by a round tab in the middle of the battery.

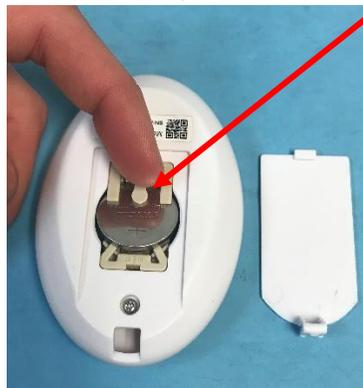



Removing the Battery

Step 3. Remove battery from holder, a pen may be required to free it from holder.



Step 4. Once the battery is removed, depress the activation button to discharge any energy.

Step 5. Slide battery in to holder and press down on the raised side of battery until battery clicks in to position. Replace the cover, the transmitter is now ready to program or use as needed.



For additional assistance please call us at (714) 668-1200 or (800) 200-1956

Please refer to our website at www.gothotwater.com for warranty and indemnification information.