




Mounting Bracket for C3-100 and S3-100 ACT, Inc. D'MAND Kontrols® Systems



Model# MB-CS-SS-SM Bracket

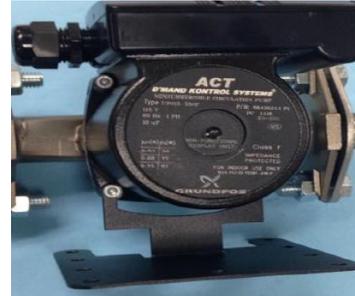

Bracket installed on S3-100 D'MAND® System

Your ACT, Inc. D'MAND KONTROLS® System may be fitted with an accessory bracket to secure it to a flat surface following these simple steps.

A. Items needed: Model #: MB-CS-SS-SM Mounting Bracket kit, 5/32" Allen wrench (not included) size #8 mounting screws (not included)

Mounting Bracket (included)



5/32" Allen wrench #8 mounting screws (not included)



1. Identify the bracket, new connector bolts, and the base of the pump. (Above)
2. Remove lower two existing Allen bolts from your C3-100/S3-100 base. (Below)



3. Place bracket so connector holes line up with the two (2) bolt holes. Re-insert bolts through the bracket and into base of pump.



4. Repeat for both sides of bracket/pump. Your system should look like this when you are done.



5. Your ACT, Inc. D'MAND KONTROLS® System is now ready to be mounted. Your pump may be mounted in any horizontal position. (See pump instructions for pump mounting).

Please refer to our website at www.gothotwater.com for warranty and indemnification information.

If you have any questions please do not hesitate to contact ACT, Inc. D'MAND® Systems at (800) 200-1956. The offices are open M-F 7:30am-4pm PST.