




## Mounting Bracket for SS3-200 ACT, Inc. D'MAND Kontrols® Systems



Model# MB-BR-LRG Bracket

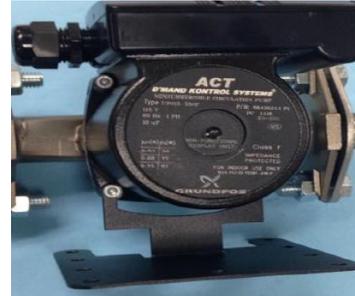

Bracket installed on the D'MAND® System

Your ACT, Inc. D'MAND KONTROLS® System may be fitted with an accessory bracket to secure it to a flat surface following these simple steps.

### A. Items needed: Model #: MB-BR-LRG Mounting Bracket kit, 3/16" Allen wrench (not included) size #8 mounting screws (not included)

Mounting Bracket (included)



3/16" Allen wrench #8 mounting screws (not included)



1. Identify the bracket, new connector bolts, and the base of the pump. (Above)
2. Remove lower two existing Allen bolts from your SS3-200 base. (Below)



3. Place bracket so connector holes line up with the two (2) bolt holes. Re-insert bolts through the bracket and into base of pump.



4. Repeat for both sides of bracket/pump. Your system should look like this when you are done.



5. Your ACT, Inc. D'MAND KONTROLS® System is now ready to be mounted. Your pump may be mounted in any horizontal position. (See pump instructions for pump mounting).

Please refer to our website at [www.gothotwater.com](http://www.gothotwater.com) for warranty and indemnification information.

If you have any questions please do not hesitate to contact ACT, Inc. D'MAND® Systems at (800) 200-1956. The offices are open M-F 7:30am-4pm PST.