



Bluetooth Repeater Instructions iPhone/Android

The ACT Inc. App allows you to sync and manage several ACT Inc. Bluetooth wireless devices. Your Bluetooth Kit is shipped from the factory already programmed with an account, and is ready to use with your D'MAND Kontrols® System. You can use the App to review devices linked to the account and add additional or delete Bluetooth devices, but it is not necessary for activation.

How to Download the ACT Inc., D'MAND Kontrols® Systems App


- 1.** Open the App store or Play store (see below).
- 2.** Search by entering: *ACT Inc. D'MAND Kontrols® Systems*.
- 3.** Download the App for free. **Please make sure both your Wi-Fi and Bluetooth settings are enabled on your phone or tablet. And other Bluetooth devices (earpieces, headphones, wireless speakers etc.) are NOT actively paired to your phone when pairing your ACT Inc. Transmitters and/or Motion Sensors.**




Launch the ACT D'MAND Kontrols® App by tapping the application icon. You will see a login / sign up screen.

How to Set Up Your Bluetooth Kontrols®

Option 1: *Your Wireless Kit package contains a slip with your user name and password. Enter it here.* Your user name will be in the format actbt####.

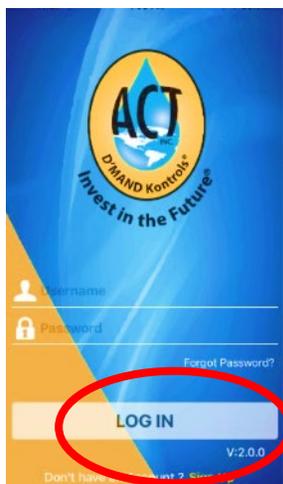

Option 2: If you do not have a user name or password, you can easily create a new account by clicking on the "Sign Up" button on the bottom right of the page. [Please call 800-200-1956 for assistance with linking/pairing additional individual devices.](tel:800-200-1956)

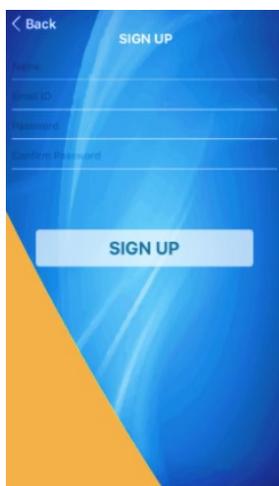

Enter a user name (no spaces), valid email address, and password. The password must contain a minimum of 6 characters and include letters, special characters and numbers. (I.e. *a@1234*). Once entered, click "SIGN UP".

How to add a Repeater (range extender) to your system


The Bluetooth Repeater is to extend the range of your system or allow the signal to (go around) barriers that may block the signal. (i.e. metal, water, thick concrete)

Adding a Bluetooth Repeater


1. Unpackage your Repeater, and ensure the dongle is securely affixed to the USB port.
2. ACT Inc. Bluetooth Repeater (Shown right)
3. Plug Repeater into an outlet.




4. From the main menu you can add your range extending Bluetooth Repeater tapping the “plus” circle in the bottom right of the screen. This will take you to “Add Device”. Immediately plug the Repeater into the wall (repeat step 3), then tap bottom button, “Then Scan”.

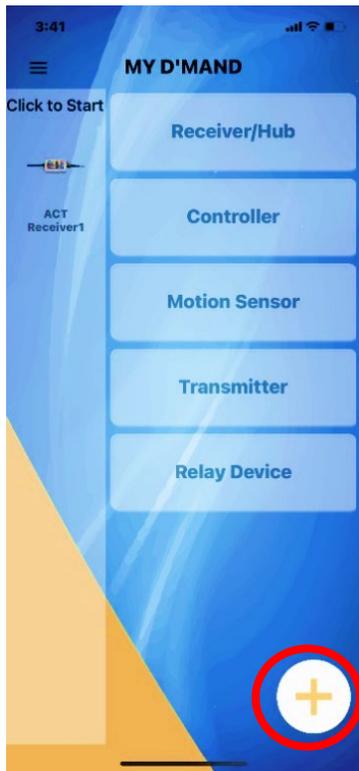

5. This will take you to the second “Add Device” page. When the banner shows the new Repeater with the ID number, tap the banner so it turns solid white. Next, hit the arrow on the bottom right of screen. This will take you to the Pairing screen where you will tap yes to finish the programming. (Note: unlike other Bluetooth devices no further linking needs to be done as this always works when plugged in.)

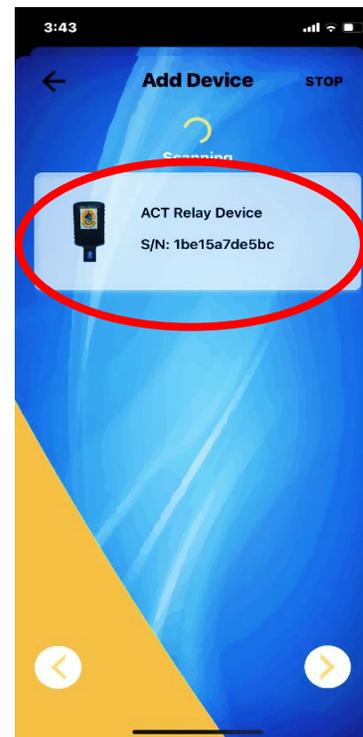

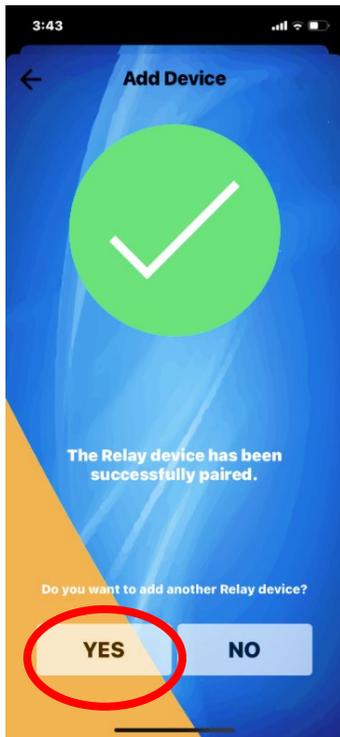

Note: Please consult your ACT Inc. D'MAND[®] instructions with any questions on pump operation, other remote devices or activators. Wireless Bluetooth/RF device range is a consistently observed performance estimate when tested in a factory setting, by ACT Inc. All ranges listed in the instructions and marketing materials are the best known estimates and cannot be considered absolute or guaranteed. The end user may experience lesser or greater range based on both the physical and RF environment the system is used in.

ACT Inc. D'MAND[®] Kontrols Systems
(800) 200-1956

Please refer to our website at
www.gothotwater.com for warranty and
indemnification information.

6. You can add up to 15 extra Bluetooth Transmitters, Motion Sensors or Repeaters.
Please call 800-200-1956 for assistance with linking/pairing additional individual devices.

7. You are now ready to use your new Bluetooth Wireless Kit!